

MICRO SCOOTER LUGGAGE

| | |
|----------|-------|
| English | 8-11 |
| Deutsch | 12-15 |
| Français | 16-19 |
| Italiano | 20-23 |
| Español | 24-27 |
| 中文(繁) | 28-31 |

Pictures for reference only



m-oro

better urban lifestyle





Set-up 1



Set-up 2



Set-up 3



Set-up 4

Deck unfolding / Deck aufklappen / Déploiement du pont / Svolgimento del ponte / Despliegue de la cubierta / 甲板展开



Deck folding / Deck falten / Pliage du pont / Ponte pieghevole / Cubierta abatible / 甲板折叠



Extend handlebar / Lenker ausziehen / Allonger le guidon / Allungare il manubrio / Extender el manillar / 延长车把




Retract handlebar / Lenker einfahren / Rétracter le guidon / Manubrio retrattile / Manillar retráctil / 缩回车把



Detach luggage / Koffer abnehmen / Détacher le bagage / Staccare il bagaglio / Desmontar equipaje / 拆卸行李



Attach luggage / Koffer anbringen / Attacher le bagage / Fissare il bagaglio / Fijar equipaje / 安装行李

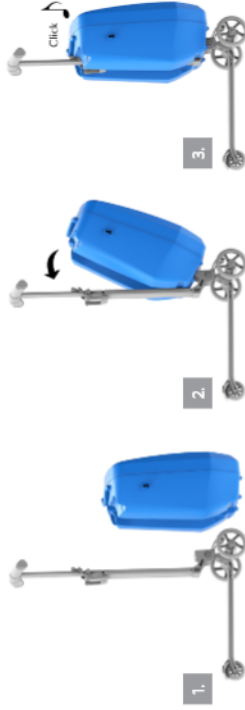


Attach strap / Gurt anbringen / Attacher la sangle / Fissare la cinghia / Colocare la correa / 连接带子



1.




2.

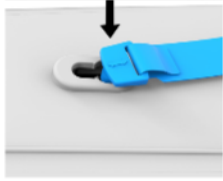

3.



4.

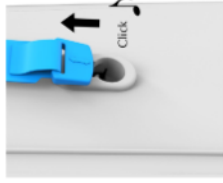



CONTENTS

| | |
|--------------------------------|----|
| Instructions for use | 2 |
| Maintenance instructions | 7 |
| Safety instructions | 9 |
| How to use the product | 11 |
| Maintenance | 11 |
| Warranty | 11 |
| Disposal | 11 |

SAFETY INSTRUCTIONS

Observe the following instructions to avoid injuries and accidents:

- Inspect your Micro Scooter Luggage before each trip and make sure all latches, levers, nuts and bolts are tight and that the case is firmly seated.
- Make sure that the wheels are properly attached and show no signs of wear. Make sure that the steering tube holds securely at the desired height. Before each ride, check that the steering is adjusted correctly.



Wear a safety-approved helmet and protective equipment. Always wear shoes while riding the scooter. Using the product in a careless or improper way can result in serious or even fatal injuries. Note the following information to avoid accidents and injuries.

- Drive only on level roads.
- Brake System: Your Micro Scooter Luggage has an innovative brake system. To activate the brake, simply step on the rear wheel brake with one of your feet.
- The brake attachment becomes hot during use. Avoid continuous braking, as there is a risk of burns.
- Do not drive faster than 10 km/h 6.2mph.
- Avoid streets, roads and other places with automobile traffic.
- Do not drive at dusk and dark.
- Do not ride on wet, oily, sandy, dirty, icy, snowy, rough or uneven surfaces.
- Adapt the driving style to personal abilities, no stunt driving.
- Do not make any changes to your Micro Scooter Luggage.
- The maximum load capacity of 100kg must not be exceeded.

- Screw locks may lose their effectiveness after several months.
- Keep the instruction manual in a safe place.

WARNING! Risk of suffocation!

The Micro Scooter Luggage contains small parts that can be swallowed. Never let children play with the packaging and small parts. Children can get entangled in the packaging while playing and suffocate or may swallow small parts and choke on them

- The Micro Scooter Luggage must be assembled by an adult.

CAUTION! Risk of crushing!

There is a risk of crushing while folding or unfolding the Micro Scooter Luggage. Children should use the Micro Scooter Luggage only under adult supervision.

- Please keep your fingers out of the folding mechanism.

NOTICE! Risk of damage!

Incorrect assembly of the Micro Scooter Luggage or improper handling can result in damage to the Micro Scooter Luggage.

- Only use the Micro Scooter Luggage when the steering rod is fully locked into place. Follow the assembly instructions for your specific model.
- The Micro Scooter Luggage may only be repaired by an authorised specialist service centre. Only original spare parts may be used.
- Never lean with your full weight on the handle bars, since this could cause the tube to bend slightly, thus preventing proper height adjustments of the Micro Scooter Luggage.

HOW TO USE THE PRODUCT

The various possible uses of the Micro Scooter Luggage and its proper handling are described in the chapter "Instructions for use".

MAINTENANCE

- Regularly check the tightness of all screws and the condition of the wheels and replace them if necessary. Clean the Micro Scooter Luggage with a damp, soft cloth and check it regularly for visual disturbances and changes. See page 7 for instructions on changing the wheels.
- Spray all moving parts of the folding mechanism with penetrating oil at least every 3 weeks and rub them down afterward. Check the headset (steering head bearing) after approx. 4 weeks and adjust if necessary.
- The Micro Scooter Luggage may only be repaired by a specialist workshop. Only original spare parts may be used.

WARRANTY

In principle, the statutory warranty applies. The warranty period may vary by country. Please contact the official Micro dealer in your country for the warranty conditions.

DISPOSAL

Dispose of the product and packaging in accordance with the laws and regulations applicable in your country. Dispose of paper and cardboard as waste paper.



Recyclable paper